




































ATR 72-500 EXTERIOR DECALS

Sr.No	PART NUMBER	DESCRIPTION	IMAGE
1	EAPL-ATR-72E-001-EPA	ATR72: OXYGEN DISCHARGE	
2	EAPL-ATR-72E-002-EPA	ATR72: OPEN	
3	EAPL-ATR-72E-003-EPA	ATR72: CLOSED	
4	EAPL-ATR-72E-004-EPA	ATR72: WATER DRAIN VALVE	
5	EAPL-ATR-72E-005-EPA	ATR72: (CURVED ARROW, BLACK)	
6	EAPL-ATR-72E-006-EPA	ATR72: BRAKE AND ANTISKID HYDRAULIC SYSTEM INSPECTION	
7	EAPL-ATR-72E-007-EPA	ATR72: EMERGENCY HYD. FUSES AND ANTISKID INSPECTION	
8	EAPL-ATR-72E-008-EPA	ATR72: FREIGHT FORBIDDEN IN THIS COMPARTMENT	
9	EAPL-ATR-72E-009-EPA	ATR72: CAUTION BEFORE OPENING REMOVE THE INTERNAL BALL LOCK PIN	
10	EAPL-ATR-72E-010-EPA	ATR72: ACCESS TO: FIN ATTACHMENT	
11	EAPL-ATR-72E-011-EPA	ATR72: HYDRAULIC ACCU NITROGEN CHARGING AND INTERPHONE JACK	
12	EAPL-ATR-72E-012-EPA	ATR72: BRAKE MLG CONTROL VALVE AND ANTISKID SYSTEM INSPECTION	
13	EAPL-ATR-72E-013-EPA	ATR72: HYDRAULIC PUMPS AND FILTERS INSPECTION	
14	EAPL-ATR-72E-014-EPA	ATR72: TO OPEN PULL LEVER FULLY DOWN	
15	EAPL-ATR-72E-015-EPA	ATR72: EMERGENCY BRAKE ACCU 3000 P.S.I.	
16	EAPL-ATR-72E-016-EPA	ATR72: REFUELING GROUND CONNECTION	
17	EAPL-ATR-72E-017-EPA	ATR72: CAPT	
18	EAPL-ATR-72E-018-EPA	ATR72: F/O	
19	EAPL-ATR-72E-019-EPA	ATR72: STBY	

20	EAPL-ATR-72E-020-EPA	ATR72: HYDRAULIC RESERVOIR FILLING AND RETURN FILTERS INSPECTION	HYDRAULIC RESERVOIR FILLING AND RETURN FILTERS INSPECTION
21	EAPL-ATR-72E-021-EPA	ATR72: Hydraulic Ground Connection	HYDRAULIC GROUND CONNECTION
22	EAPL-ATR-72E-022-EPA	ATR72: DC HYDRAULIC PUMP INSPECTION	DC HYDRAULIC PUMP INSPECTION
23	EAPL-ATR-72E-023-EPA	ATR72: Fuse Electro-pump Access	FUEL ELECTRO-PUMP ACCESS
24	EAPL-ATR-72E-024-EPA	ATR72: POTABLE WATER SERVICE	POTABLE WATER SERVICE
25	EAPL-ATR-72E-025-EPA	ATR72:TOILET SERVICE	TOILET SERVICE
26	EAPL-ATR-72E-026-EPA	ATR72: AC	A.C.
27	EAPL-ATR-72E-027-EPA	ATR72: DC	D.C.
28	EAPL-ATR-72E-028-EPA	ATR72: ACCESS TO CARGO DOOR CONTROL PANEL	ACCESS TO CARGO DOOR CONTROL PANEL
29	EAPL-ATR-72E-029-EPA	ATR72: TEMPERATURE CONTROL VALVE INSPECTION	TEMPERATURE CONTROL VALVE INSPECTION
30	EAPL-ATR-72E-030-EPA	ATR72: AIR CONDITIONING GROUND CONNECTION	AIR CONDITIONING VALVE INSPECTION
31	EAPL-ATR-72E-031-EPA	ATR72: REFUELLING ELECTRICAL CONTROL PANEL	REFUELLING ELECTRICAL CONTROL PANEL
32	EAPL-ATR-72E-032-EPA	ATR72: AIR CONDITIONING VALVE INSPECTION	AIR CONDITIONING GROUND CONNECTION
33	EAPL-ATR-72E-033-EPA	ATR72: ELECTRICAL GROUND CONNECTIONS	ELECTRICAL GROUND CONNECTIONS
34	EAPL-ATR-72E-034-EPA	ATR72: MAGNETIC FUEL LEVEL	MAGNETIC FUEL LEVEL
35	EAPL-ATR-72E-035-EPA	ATR72: JET FUEL	JET FUEL FOR SPECIFICATIONS SEE FLIGHT MANUAL
36	EAPL-ATR-72E-036-EPA	ATR72: DO NOT WALK OUTSIDE THIS AREA	DO NOT WALK OUTSIDE THIS AREA
37	EAPL-ATR-72E-037-EPA	ATR72: TO OPEN PUSH FLAP	TO OPEN : PUSH FLAP
38	EAPL-ATR-72E-038-EPA	ATR72: LH.1	LH. 1
39	EAPL-ATR-72E-039-EPA	ATR72: LH.2	LH. 2
40	EAPL-ATR-72E-040-EPA	ATR72: RH.1	RH. 1
41	EAPL-ATR-72E-041-EPA	ATR72: RH 2	RH. 2

42	EAPL-ATR-72E-042-EPA	ATR72: ELECTRICAL (GRAPHIC)	
43	EAPL-ATR-72E-043-EPA	ATR72: JACK POINT (GRAPHIC)	
44	EAPL-ATR-72E-044-EPA	ATR72: INFLATE WITH NITROGEN ONLY	INFLATE TYRES WITH NITROGEN ONLY
45	EAPL-ATR-72E-045-EPA	ATR72: CAUTION ACCESS ALLOWED WITHIN THIS ARE ONLY	CAUTION ACCESS ALLOWED WITHIN THIS ARE ONLY, BUT ON PROTECTIVE MAT (SEE MAINTENANCE MANUAL)
46	EAPL-ATR-72E-046-EPA	ATR72: REFER TO MAINTENANCE MANUAL	REFER TO MAINTENANCE MANUAL (JIC57-00-00 0AC10000) BEFORE INSTALLING DOOR
47	EAPL-ATR-72E-047-EPA	ATR72: OIL LEVEL	OIL LEVEL
48	EAPL-ATR-72E-048-EPA	ATR72: FLUX VALVE	FLUX VALVE
49	EAPL-ATR-72E-049-EPA	ATR72: LEVER No 1	LEVER No 1
50	EAPL-ATR-72E-050-EPA	ATR72: LEVER NO 2	LEVER No 2
51	EAPL-ATR-72E-051-EPA	ATR72: TO OPEN	TO OPEN 1 PRESS PUSH BUTTON 2 GRASP LEVER AND PULL
52	EAPL-ATR-72E-052-EPA	ATR72: PUSH	PUSH
53	EAPL-ATR-72E-053-EPA	ATR72: FLAP	FLAP
54	EAPL-ATR-72E-054-EPA	ATR72: 30	30
55	EAPL-ATR-72E-055-EPA	ATR72: 15	15
56	EAPL-ATR-72E-056-EPA	ATR72: 0	0
57	EAPL-ATR-72E-057-EPA	ATR72: PARKING BRAKES AND M.L.G. CONTROL VALVE	PARKING BRAKES AND M.L.G. CONTROL VALVE HYDRAULIC SYSTEM INSPECTION
58	EAPL-ATR-72E-058-EPA	ATR72: IMPROPER SEALING/WATER INGRESS MUST BE AVOIDED	IMPROPER SEALING WATER INGRESS MUST BE AVOIDED USE GENERAL PURPOSE SILICONE SEALANT
59	EAPL-ATR-72E-059-EPA	ATR72: GROUND HERE	GROUND HERE
60	EAPL-ATR-72E-060-EPA	ATR72: ACCESS TO: REFUEL/ DEFUEL ELECTRO-VALVES	ACCESS TO: -REFUEL / DEFUEL ELECTRO-VALVES -REFUEL CONNECTION
61	EAPL-ATR-72E-061-EPA	ATR72: EMERGENCY BRAKES ACCU 3000 P.S.I.	EMERGENCY BRAKE ACCU 3000 P.S.I.
62	EAPL-ATR-72E-062-EPA	ATR72: CAUTION CHECK INTERNAL DOOR LOCK	CAUTION CHECK INTERNAL DOOR LOCK IS NOT ENGAGED BEFORE OPENING
63	EAPL-ATR-72E-063-EPA	ATR72: ROTATE TO LIFT AND PULL TO OPEN	ROTATE TO LIFT AND PULL TO OPEN

64	EAPL-ATR-72E-064-EPA	ATR72: (ARROW, BLACK)	
65	EAPL-ATR-72E-065-EPA	ATR72: TO DEPLOY 1 UNLOCK THE BULKHEAD LATCH PUSHING DOWN THE LEVER	
66	EAPL-ATR-72E-066-EPA	ATR72: TO OEPN PULL AND ROTATE	
67	EAPL-ATR-72E-067-EPA	ATR72: SEAL AFTER REMOVAL !	
68	EAPL-ATR-72E-068-EPA	ATR72: REFUELLING ELECTRICAL CONTROL PANEL	
69	EAPL-ATR-72E-069-EPA	ATR72: NO STEP	
70	EAPL-ATR-72E-070-EPA	ATR72: CAUTION IN CASE OF ACTUATOR FAILURE	
71	EAPL-ATR-72E-071-EPA	ATR72: 25	
72	EAPL-ATR-72E-072-EPA	ATR72: CAUTION CHECK INTERNAL DOOR LOCK	
73	EAPL-ATR-72E-073-EPA	ATR72: ROTATE TO LIFT AND PULL TO OPEN	
74	EAPL-ATR-72E-074-EPA	ATR72: EMERGENCY EXIT	
75	EAPL-ATR-72E-075-EPA	ATR72: EXIT	
76	EAPL-ATR-72E-076-EPA	ATR72: TO CLOSE 1 UNLOCK FOLDING STRUT	
77	EAPL-ATR-72E-077-EPA	ATR72: STATIC PORTS DO NOT PLUG OR DEFORM HOLES	
78	EAPL-ATR-72E-078-EPA	ATR72: JET FUEL MAX PRESSURE	
79	EAPL-ATR-72E-079-EPA	ATR72: TO OPEN 1 PUSH FLAP TO GRASP HANDLE	
80	EAPL-ATR-72E-080-EPA	ATR72: CAUTION FLUX VALVE HIGHLY SENSITIVE	
81	EAPL-ATR-72E-081-EPA	ATR72: CAUTION FLIGHT RECORDERS HERE	
82	EAPL-ATR-72E-082-EPA	ATR72: JACK POINT (GRAPHIC)	
83	EAPL-ATR-72E-083-EPA	ATR72: MAX TOWING ANGLE	
84	EAPL-ATR-72E-084-EPA	ATR72: (CHALK ZONE MARKINGS STENCIL)	
85	EAPL-ATR-72E-085-EPA	ATR72: (STATIC PORT BORDERS - PORT STENCIL)	

86	EAPL-ATR-72E-086-EPA	ATR72: (STATIC PORT BORDERS - PORT STENCIL)	
87	EAPL-ATR-72E-087-EPA	ATR72: (STALL WARNINGS STENCIL)	
88	EAPL-ATR-72E-088-EPA	ATR72: Cut Here In Emergency	
89	EAPL-ATR-72E-089-EPA	ATR72:Right Angle Break-in-Markins	
90	EAPL-ATR-72E-090-EPA	ATR72: datum Reference Marking	
91	EAPL-ATR-72E-091-EPA	ATR72: Static Port Circle	
92	EAPL-ATR-72E-092-EPA	ATR72: Static Port Oval	